



PACKAGE CONTENTS

Light board & Bulbs
Control Unit
Mounting Screws
Lens
Instructions

Sensitivity Control Knob (In-Dash ColorBar only)
Colorbar Included with Combo Only

• If anything is missing please notify the store you purchased it within 48 hours from the time of purchase.

Lens Installation

- 1. Remove Clock housing.
- 2. Lay housing down on its face.
- 3. Line lens up on the back of the clock housing and apply clear tape in 4 spots to secure in place. (As shown in picture) Be careful not to put tape too wide on lens.



BACK OF CLOCK HOUSING

Sensitivity/Volume

For best results, turn your sensitivity knob about halfway with your music volume about the same, and the higher you turn the sensitivity the brighter the lights will be. If your music volume is high, lower your sensitivity to even the system out and vice versa. Every song will cause the lights to react differently. Choose your preference and enjoy the light show.

Changing Bulbs

To remove bulbs use one hand to hold the wires and the other to gently pull the bulb out of the receptacle. To replace bulbs make sure both pins are lined up with the receptacle holes and gently push it in. Do not push the head of the bulb through the hole in the light board. Push the bulb in the board and attach/reattach from the back. If it does not go in smoothly, move it from side to side while pushing it into place. If Bulbs do not work make sure they are secured in the receptacle. Secondly, look to see if they have shorted out. (If wires inside the bulb are separated bulb is blown out)

Caution and Warning

Do not mount the unit anywhere that may obstruct your view while driving. Always select your sensitivity before or after operating your vehicle.

*Only use Original bulbs purchased from the manufacturer or its distributors. Usage of other bulbs will void your warranty. To purchase bulbs, call (562)483-1445. 90 Day Limited Warranty